



# bedside commode assembly instructions



fast & easy assembly,  
no tools required

se ensambla de  
forma sencilla,  
rápida y sin  
herramientas



B357-21

# 1

## part check


side frames



commode back



toilet seat and lid

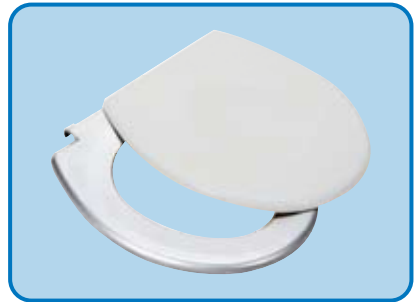

pail support



splash guard, bucket and lid



Note: actual items may vary from what is shown

# commode back assembly

# 2



TO AVOID SERIOUS INJURY,  
BEDSIDE COMMODE MUST  
BE PROPERLY ASSEMBLED.  
MAKE SURE SNAP BUTTON IS  
SECURELY LOCKED INTO PLACE.



# 3

## pail support assembly



TO AVOID SERIOUS INJURY,  
BEDSIDE COMMODE MUST BE PROPERLY  
ASSEMBLED. MAKE SURE SNAP BUTTON  
IS SECURELY LOCKED INTO PLACE.

# bucket or splash guard


# 4



use bucket



use splash guard

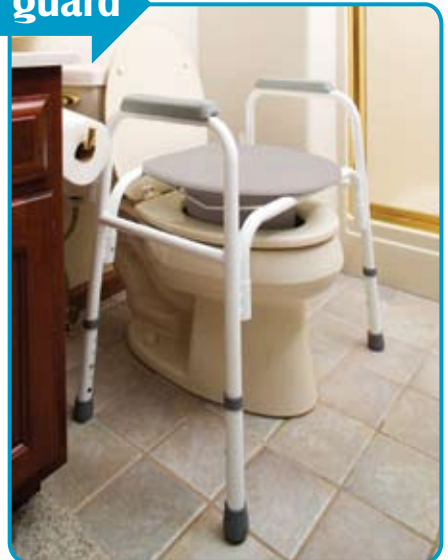

**note:** remove commode back before placing over toilet

# 5

## seat and lid assembly



# adjust leg height

# 6



TO AVOID SERIOUS INJURY, BEDSIDE COMMODE MUST BE PROPERLY ASSEMBLED.  
MAKE SURE SNAP BUTTON IS SECURELY LOCKED INTO PLACE.



comfort & convenience  
in your own home



**Carex Health Brands**

©2007 Carex Health Brands • Sioux Falls, SD • [www.carex.com](http://www.carex.com)